

www.airlink-ilife.com

ASP38 1.3megapixel / ASP39 2.0megapixel with Speaker 4G/3G IP camera User Guide

Contents

1. Camera Description	2
2. Hardware installation	3-4
3. Add & view camera from PC	.5
4. Add & View from APP	.6-7
5. Set up from Web IE	.8
6. How to set up for my 4G camera's modem?	9
7. Can I use Wifi signal for priority, if lost wifi signal then switch to	4G service? &
Frequency question	10



4G/3G IP camera **Quick Start Guide**

1.1 Camera packaging



Packaging contents

- 1) Camera body *1
- Power adapter*2 (for camera *1, for speaker *1)
- 3) Screws bag*2
- 4) Software disk*1
- 5) User manual*1
- Antenna*1
- Speaker*1

1.2 Camera Interference






Notification: Please insert SIM card then antenna before power on your 4G camera , 4G SSID MiFi-xxxx
Password 1234567890

2.1 Install the Micro SD card, SIM card and antenna

2.1.1 Remove screws from the housing cover which is Lens and LED part



2.1.2 Insert SIM card & Micro SD card

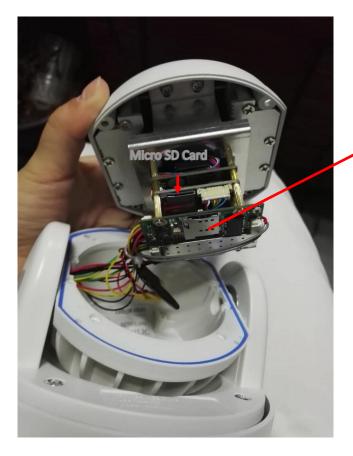



- 1. SIM card size type is Micro Sim 12mmx15mmx0.8mm
- 2. Please note the direction of SIM card installation
- 3. Hot swapping is not supported.
- 4. Micro SD card support max 128G



2.1.3 Connect Antenna






- 3 Adding cameras to PC CMS
- 3.1.1 Download program "AirLink +"



3.1.2 View via local IP address through CMS auto search or by UID number

Search SSID MIF xxxxxx from your network, password is 1234567890, login in to "Airlink +" login: admin, password is

blank

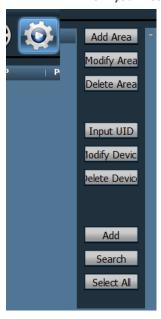

Click preview



Connected your camera success



More details please read

📆 IP Camera AirLink+4GP2P CMS user manual



4 View via smart phone

4.1 Download Camtop or Hicam from Google Play Store and iOS App Store or scan QR code on the camera box

click "+" to input the camera UID & password to add camera

Default login / password is admin/admin







Scan QR Code for quick install

If your 4G camera is offline, please "Check the SIM card in correct way" or not.


4.2 Click speaker icon when you use external speaker to talk





4.2 Set Micro SD card for recording


4.2.1 Format SD card

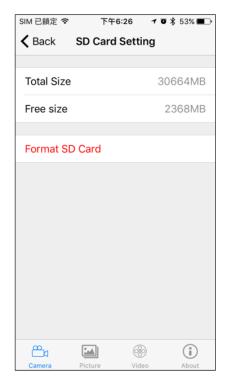


4.2.2 Alarm Setting switch on of your motion detection



4.2.3 Switch Action with Alarm with your prefer

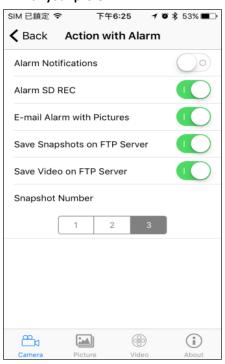


4.2.4 Set record timer

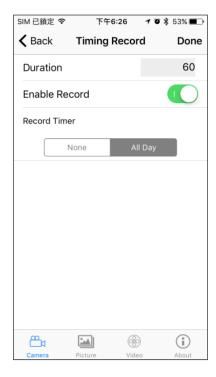




5 . Setting up or view your camera via web IE , download "Search IP tool" Login / password as admin/admin



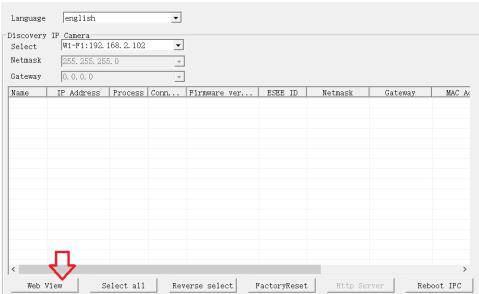

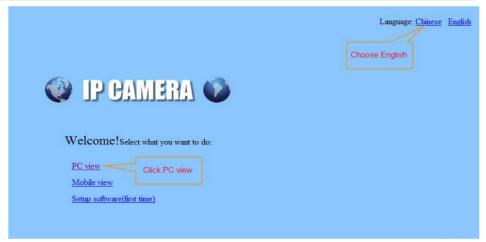

click "PC view", as shown below:






6. How to set up for my 4G camera's modem?

Please make sure in the same network then type from IE http:// 192.168.100.1

Login: admin

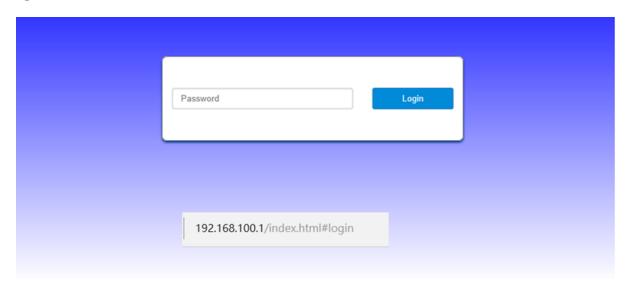




If your SIM card has login password, please input your SIM card password first






7. Can I use Wifi signal for priority, if lost wifi signal then switch to 4G service?

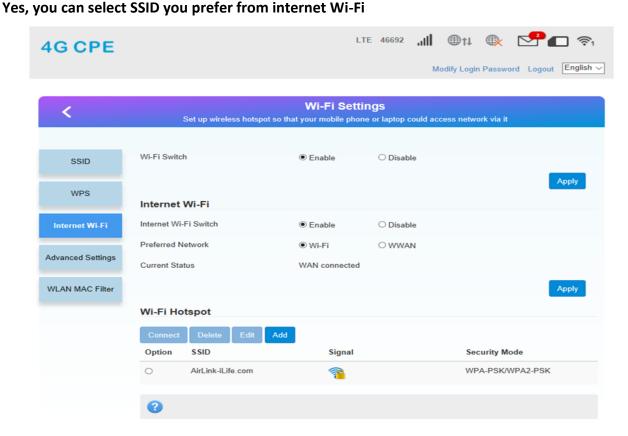

 - 8. Frequency questions
- 1. Why my 4G camera is offline?
- A: 1. Please make sure insert of the sim card in correct position.
- 2. Double make sure your sim card not invalid, please insert your sim card into your 4G smart phone make sure in good signal of your area with your local provider service





Out service Good signal

Thank you for read our quick start guide, more details please read user manual in CD. If you need our support please send email to us at support@airlinkwifi.net